


## EXPLODED VIEW & PARTS LIST


FIG.1 CRANKCASE/GOVERNOR GEAR ASSEMBLY

Part Number 103.101B.000

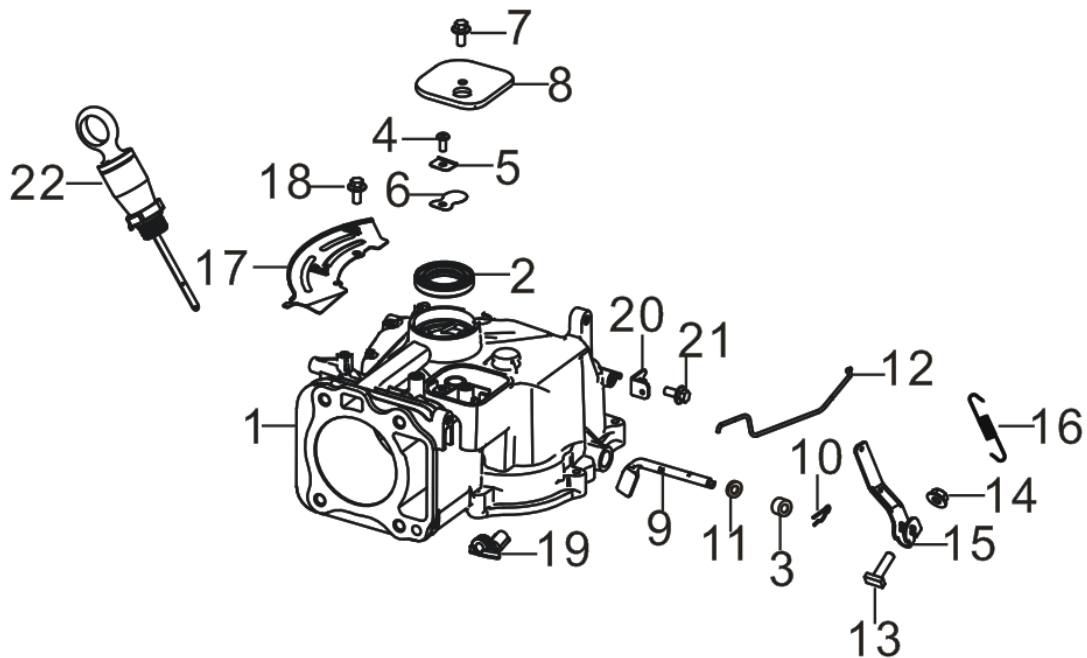


REF	PART NO	DESCRIPTION	QTY
1	103.101B.001	CRANKCASE SUBASSEMBLY	1
2	103.101B.002	OIL SEAL	1
3	103.101B.003	OIL SEAL	1
4	103.101B.004	SCREW	1
5	103.101B.005	BREATH PIECE	1
6	103.101B.006		1
7	103.101B.007	BOLT	1
8	103.101B.008	BREATH GROOVE COVER PLATE	1
9	103.101B.009	GOVERNOR ARM	1
10	103.101B.010	PIN	1
11	103.101B.011	FLAT WASHER	1
12	103.101B.012	GOVERNOR ROD	1
13	103.101B.013	GOVERNOR SUPPORT BOLT	1
14	103.101B.014	NUT	1
15	103.101B.015	GOVERNOR SUPPORT SUBASSEMBLY	1
16	103.101B.016	GOVERNOR SPRING	1
17	103.101B.017	CRANKCASE SIDE SHIELD	1
18	103.101B.018	BOLT	1
19	103.101B.019		1
20	103.101B.020	PLATE SUBASSEMBLY, THROTTLE CONTROL BOTTOM	1
21	103.101B.021	BOLT	1

**FIG.2 CRANKCASE COVER SUBASSEMBLY**  
**Part Number 103.101B.023**

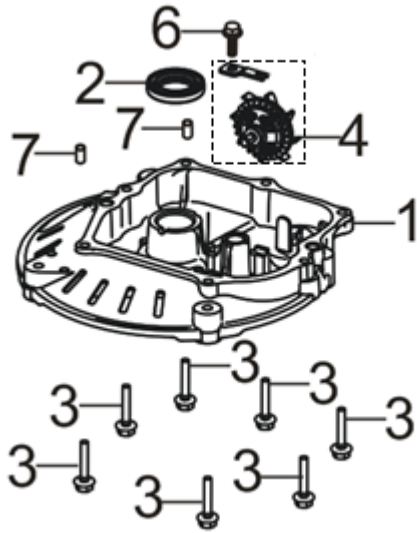


REF	PART NO	DESCRIPTION	QTY
1	103.101B.024	CRANKCASE COVER	1
2	103.101B.025	OIL SEAL	1
3	103.101B.026	BOLT	7
4	103.101B.027	GOVERNOR GEAR ASSEMBLY	1
6	103.101B.028	BOLT	1

**FIG.3 CYLINDER HEAD SUBASSEMBLY / SPARK PLUG**  
**Part Number 103.101B.030**

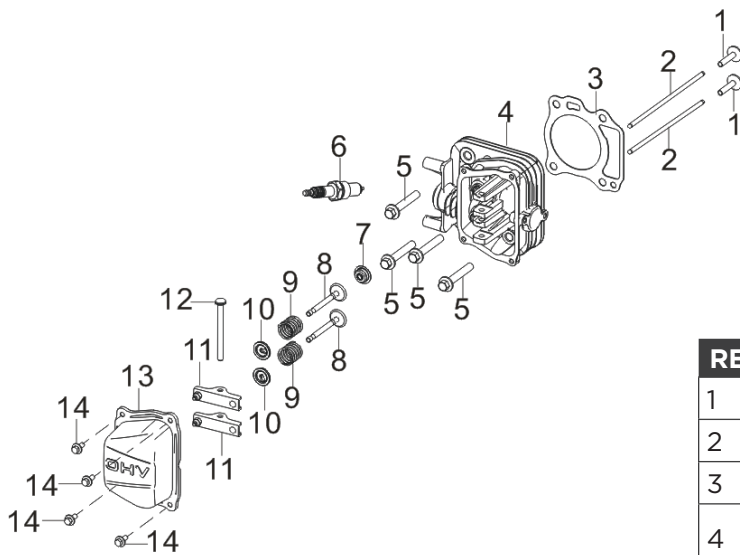


REF	PART NO	DESCRIPTION	QTY
1	103.101B.031	VALVE TAPPET	2
2	103.101B.032	VALVE LIFTER	2
3	103.101B.033	CYLINDER HEAD GASKET	1
4	103.101B.034	CYLINDER HEAD SUBASSEMBLY	1
5	103.101B.035	BOLT	4
6	103.101B.036	SPARK PLUG	1
7	103.101B.037	SEAL GUIDE	1
8	103.101B.038	VALVES SET	2
9	103.101B.039	VALVE SPRING	2
10	103.101B.040	VALVE SPRING SEAT	2
11	103.101B.041	VALVE ROCKER SUBASSEMBLY	2
12	103.101B.042	VALVE ROCKER SHAFT	1
13	103.101B.043	CYLINDER HEAD COVER	1
14	103.101B.044	BOLT	4

**FIG.4 CRANKSHAFT CONNETING ROD**  
**Part Number 103.101B.045**

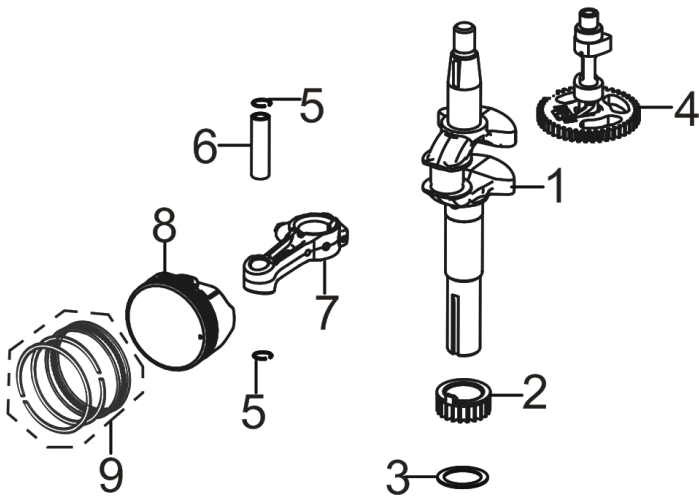


REF	PART NO	DESCRIPTION	QTY
1	103.101B.046	CRANKSHAFT ASSEMBLY	1
2	103.101B.047	TIMING DRIVE GEAR	1
3	103.101B.048	FLAT WASHER	1
4	103.101B.049	CAMSHAFT ASSEMBLY	1
5	103.101B.050	PISTON PIN CLIP	2
6	103.101B.051	PISTON PIN	1
7	103.101B.052	CONNECTING ROD	1
8	103.101B.053	PISTON	1
9	103.101B.054	PISTON RINGS ASSEMBLY	1

**FIG.5 RECOIL STARTER**  
**Part Number 103.101B.055**

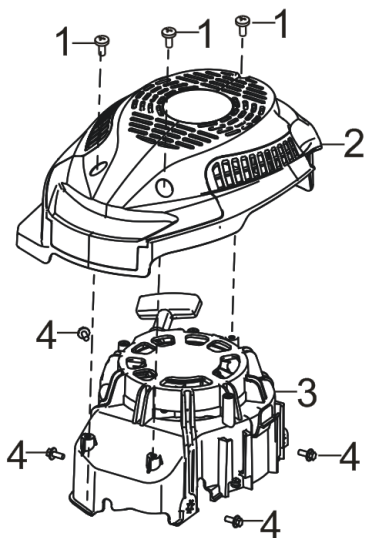


REF	PART NO	DESCRIPTION	QTY
1	103.101B.056	SCREW	3
2	103.101B.057	HOUSING, ENGINE	1
3	103.101B.058	STARTER ASSY, RECOIL	1
4	103.101B.059	BOLT	4

**FIG.6 CARBURETOR ASSEMBLY**  
**Part Number 103.101B.060**

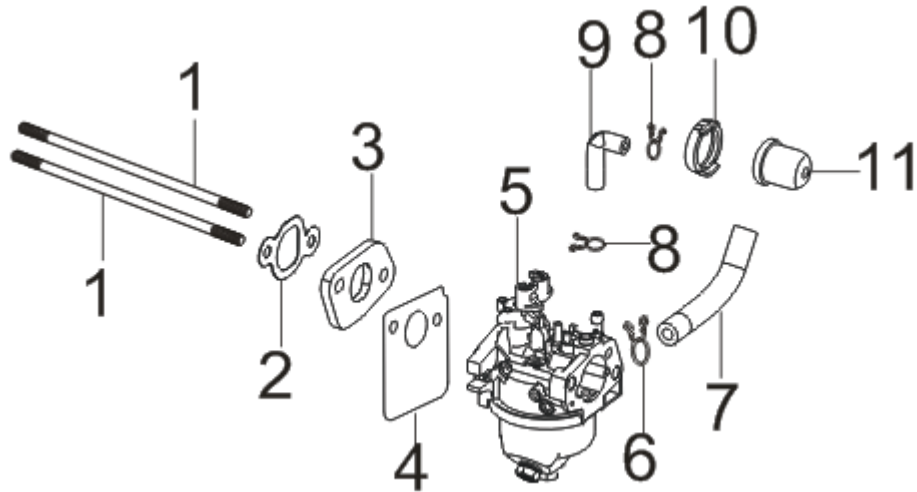

REF	PART NO	DESCRIPTION	QTY
1	103.101B.061	BOLT	1
2	103.101B.062	INLET GASKET	1
3	103.101B.063	CARBURETOR INSULATOR PLATE	1
4	103.101B.064	INSULATOR PLATE GASKET	1
5	103.101B.065	CARBURETOR ASSEMBLY	1
6	103.101B.066	CLAMP	1
7	103.101B.067	FUEL HOSE	1
8	103.101B.068	CLAMP	2
9	103.101B.069	STARTING RICHED VALVE TUBE	1
10	103.101B.070	STARTING ENRICHMENT VALVE BASE	1
11	103.101B.071	START ENRICHMENT VALVE BODY	1


**FIG.7 FLYWHEEL / IMPELLER / STARTER PULLEY / IGNITION COIL**  
**Part Number 103.101B.072**

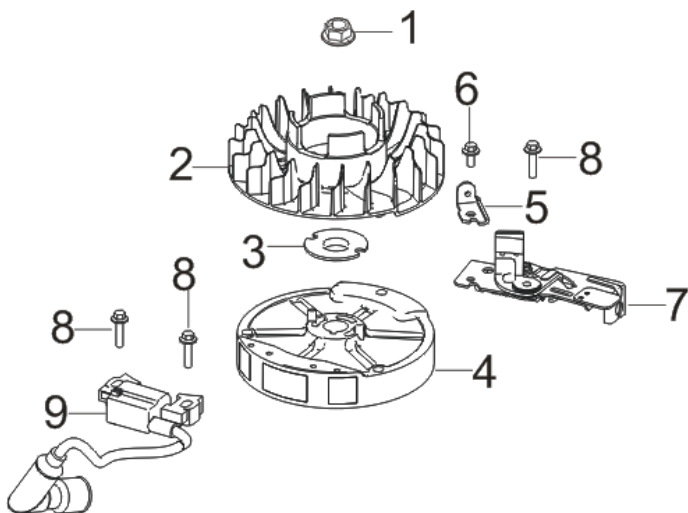

REF	PART NO	DESCRIPTION	QTY
1	103.101B.073	FLYWHEEL NUT	1
2	103.101B.074	IMPELLER	1
3	103.101B.075	STARTER CUP BASE	1
4	103.101B.076	FLYWHEEL SUBASSEMBLY	1
5	103.101B.077	LUG SHROUD	1
6	103.101B.078	BOLT	1
7	103.101B.079	BRAKE ASSEMBLY	1
8	103.101B.080	BOLT	3
9	103.101B.081	IGNITION COIL	1

**FIG.8 AIR FILTER**


**Part Number 103.101B.082**

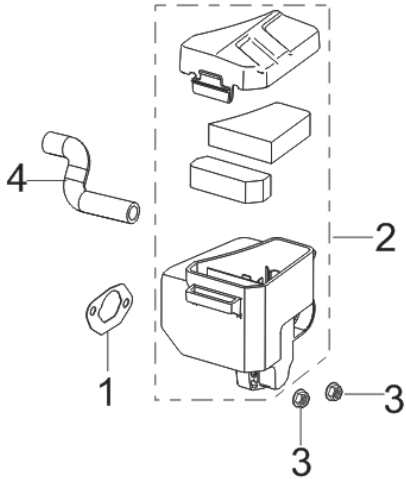

REF	PART NO	DESCRIPTION	QTY
1	103.101B.083	AIR FILTER GASKET	1
2	103.101B.084	AIR FILTER	1
3	103.101B.085	NUT	2
4	103.101B.086	BREATHER TUBE	1

**FIG.13 MUFFLER ASSEMBLY**


**Part Number 103.101B.087**

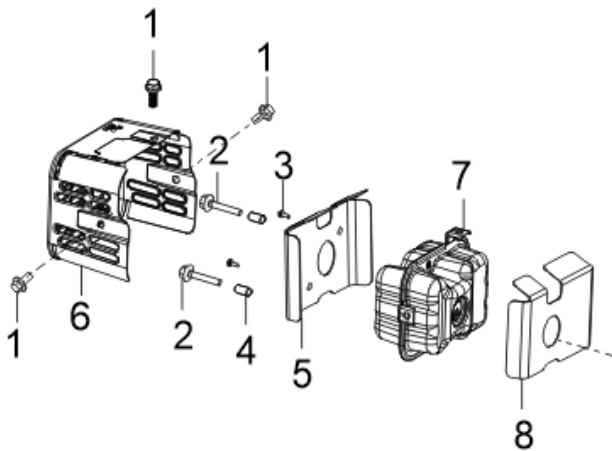

REF	PART NO	DESCRIPTION	QTY
1	103.101B.088	BOLT	3
2	103.101B.089	BOLT	2
3	103.101B.090	SCREW	2
4	103.101B.091	BUSHING	2
5	103.101B.092	MUFFLER INSULATOR PLATE	1
6	103.101B.093	MUFFLER OUTER COVER	1
7	103.101B.094	MUFFLER ASSEMBLY	1
8	103.101B.095	MUFFLER INSULATOR PLATE	1

**FIG.14 FUEL TANK ASSEMBLY**

**Part Number 103.101B.096**

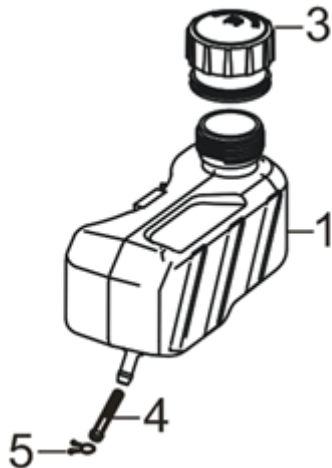

REF	PART NO	DESCRIPTION	QTY
1	103.101B.097	FUEL TANK	1
3	103.101B.098	FUEL TANK COVER	1
4	103.101B.099	FUEL STRAINER	1
5	103.101B.100	CLAMP	1